

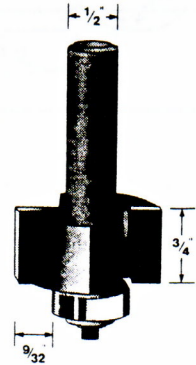


# "SMART CLIP"<sup>®</sup> INSTALLATION

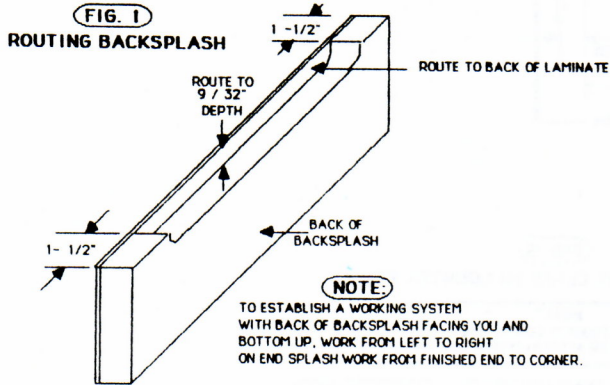

ELIMINATE ERRORS IN ROUTING WITH A [ SC-1 ROUTER BIT ] AVAILABLE THRU YOUR DISTRIBUTOR

## SPACING BAR NO. 5-B

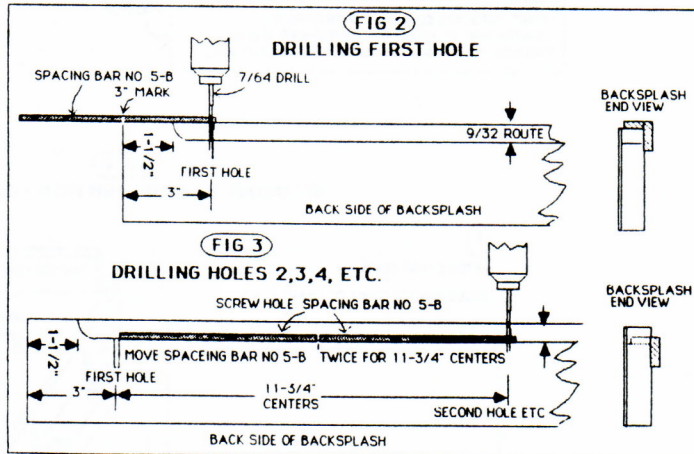

**HAVE A PROBLEM? NEED ASSISTANCE**  
CALL 1-866-234-6800

**9:00 A.M. - 5:00 P.M. E.S. TIME**

FOR EASY USE OF THE "SMART CLIP"

WE SUGGEST THE USE OF

THE SC-1 ROUTER BIT

NO. 5-B SPACING BAR

NO. 8 SCREW DEPTH SETTING BIT

FIG. 4

SETTING 1-1/2" SCREWS IN PREDRILLED HOLES


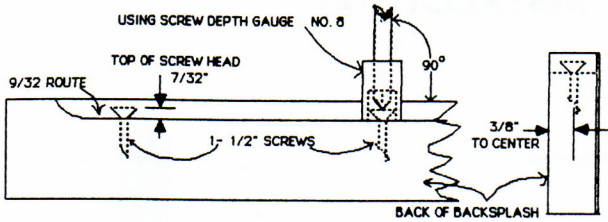


FIG. 5

SECURING SMART CLIPS TO COUNTER TOP

**NOTE\***  
 SECURE FRONT OF COUNTER ONLY  
 SECURE BACK OF COUNTER AFTER BACKSPLASH IS IN PLACE.

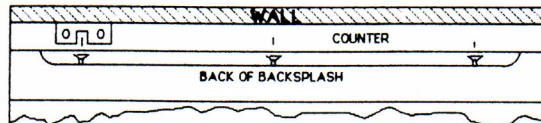

LAY BACKSPLASH FACE DOWN AND MARK CENTERS OF SCREWS ON COUNTER  
 CENTER SCREW SLOT OF CLIP ON MARKS AND SECURE CLIP, USING 3/4" SCREWS  
 HOLDING CLIP TIGHT TO WALL.




FIG. 6

SECURING BACKSPLASH INTO POSITION

